# **Product leaflet**

Product Half mask Model No. SR 900 S, M, L Ordering No. H01-3012, H01-3112, H01-3212

### **Product Description**

The SR 900 half mask is made of thermoplastic elastomer (TPE) and polypropylene (PP) in three sizes, S, M and L. The mask is equipped with two exhalation valves, which ensures very low exhalation resistance. The valve covers with partitions effectively protect the exhalation membrane against dust and paint mist. The material and pigment of the mask body are approved by FDA for foods, which minimizes the risk of contact allergies.

The easily adjustable elastic head harness straps of the mask are designed as a V-shaped loop and have a large dished crown plate, which contributes towards a comfortable and safe fit. The mask is used either as a filtering device in combination with filters from the Sundström range, or in combination with the SR 307 compressed air attachment which then serves as a breathing apparatus with continuous flow for connection to a compressed air supply.


A pre-filter holder is supplied. Best stored in box SR 230 or storage case SR 339.

## **Technical specification**

	SR 900	EN 140:1998
Inhalation resistance at 30 l/min	≈ 3 Pa	≤ 50 Pa
Exhalation resistance at 160 l/min	≈ 70 Pa	≤ 300 Pa
Service temperature	-10 – +55 °C, < 90 % RH	-
Storage temperature	-20 – +40 °C, < 90 % RH	-
Weight	S = 132 g M = 136 g L = 138 g	- - -
Assigned Protection Factor <sup>1</sup>	20 (P3) 10 (GasX) 10 (GasX P3)	- - -
Nominal Protection Factor <sup>2</sup>	48 (P3) 50 (GasX) 48 (GasX P3)	- - -
Approval	EN 140:1998	<del>-</del>

<sup>1)</sup> Specified in BS 4275, and applies generally to all half masks with particle filters P3, regardless of the test results.

- A. Mask body
- B. Gasket
- C. Filter holder
- D. Inhalation valve seat
- E. Exhalation valve seat
- F. Exhalation membrane
- G. Protective cap
- H. Inhalation membrane
- I. Head harness straps
- J. Filters (not included)
- K. Pre-filter
- L. Pre-filter holder

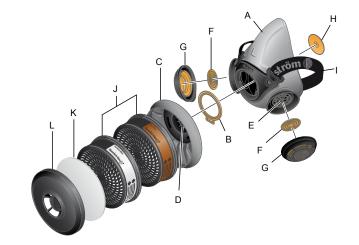



### Head Office

Tel: +46-(0)8-562 370 00 Fax: +46-(0)8-562 370 20

Visiting address: Stockholmsvägen 33 SE-181 33 Lidingö

### Factory

Tel: +46-(0)8-562 370 00 Fax: +46-(0)8-562 370 60

Visiting address: Västergatan 4 SE-341 50 Lagan



<sup>2)</sup> According to EN 529:2005.